

# Using the PTCarPhone 5 as a modem

Application Note 1502

Revision: 1.1 January 2017



# **TABLE OF CONTENTS**

0 History	4
0.1 Related Documents	4
1 Introduction	5
2 Requirements	5
3 Setup of a dial-up connection in Windows <sup>®</sup>	6
3.1 Driver installation on a PC	6
3.2 Preparation of the USB interface of the PTCarPhone	6
3.3 Connecting the USB cable	6
3.4 Entering the initialization command at the device manager	7
3.5 Setup of the dial-up connection	9
4 Disconnect and reconnect a dial-up connection	13
5 Addendum: Connection data	14



# LIST OF FIGURES

Figure 1: Key nomenclature on the PTCarPhone	6
Figure 2: The Control Panel of Windows <sup>®</sup> 7	7
Figure 3: Device Manager	8
Figure 4: Command line for the initialization command	8
Figure 5: Control Panel	9
Figure 6: Network and Sharing Center	9
Figure 7: Choose a connection option	10
Figure 8: Connect to the internet 1	10
Figure 9: Connect to the internet 2	11
Figure 10: Connect to the internet 3	11
Figure 11: Connect to the internet 4	12
Figure 12: Connect to the internet 5	12
Figure 13: Connection symbol for a working internet connection	13
Figure 14: Connection symbol for a disconnected internet connection	13
Figure 15: Context menu for a working internet connection	13
Figure 16: Display of a working Dial-up Connection with Disconnect button	13
Figure 17: Display of a disconnected Dial-up Connection with Connect button	13

# LIST OF TABLES

Table1: History	4
Table2: Related Documents	4
Table 3: APN and Dial-up phone number	14



## 0 History

Date	Revision	Author	Comments
August 2015	1.0	CS	First Release
January 2017	1.1	CS	Updates

Table1: History

## **0.1 Related Documents**

Nr.	Name	Filename	Remarks
1	PTCarPhone 5 Series User Guide		For download from http://www.ptcarphone.de/en/downloads

Table2: Related Documents



# **1** Introduction

This document describes the setup of a dial-up connection with a PTCarPhone 5 system on a Windows<sup>®</sup> 7 PC (Also tested on Windows<sup>®</sup> 10, Version 1607, Build 14393.693).

#### Please note:

The mentioned driver package contains components that are not supported. Only features and elements described in this documentation are supported.

# 2 Requirements

- A PTCarPhone 5 Series device with UMTS module
- USB cable: type A plug mini type B plug
- Driver package for Windows<sup>®</sup> (The driver package can be obtained from pei tel)



# 3 Setup of a dial-up connection in Windows<sup>®</sup>

## 3.1 Driver installation on a PC

Follow the instruction of the installation wizard to install the driver package on your PC.

## 3.2 Preparation of the USB interface of the PTCarPhone



Figure 1: Key nomenclature on the PTCarPhone

Follow these steps in the PTCarPhone menu:

- 1. Press the **System** key.
- 2. Select **Configuration** and press the function key **OK**.
- 3. Type in the device code. The device code at delivery is set to: 0000.
- 4. Select **USB interface** and press the function key **OK**.
- 5. Select **Modem** and press the function key **OK**.
- 6. To return to the main menu, press the **end key**.

## 3.3 Connecting the USB cable

Plug the USB cable into the respective sockets on the electronics box (TPU) and at the PC. On the PC's screen, the message "Found new hardware" appears and device drivers are getting installed automatically.



### 3.4 Entering the initialization command at the device manager

#### Please note:

Initialization commands for a selection of mobile phone providers are already programmed into the PTCarPhone. Just, if the modem setup won't work, the command needs to be added at this point.

1. At the PC's start menu select **Start > Control Panel > Device Manager**.



Figure 2: The Control Panel of Windows<sup>®</sup> 7



2. Check in the Modem section, if "Telit Mobile Highspeed Modem" is listed.



Figure 3: Device Manager

 Right-click the "Telit Mobile Highspeed Modem", and select **Properties**. Add the **Initialization Command** of your mobile phone provider on the **Advanced tab** close the window by pressing **OK**.



Figure 4: Command line for the initialization command

Please find more on "initialization commands" in the Addendum.



### 3.5 Setup of the dial-up connection

1. At the PC's start menu select **Start > Control Panel > Device Manager** and open the **Network and Sharing Center**.



Figure 5: Control Panel

2. Select Set up a new connection or network.



Figure 6: Network and Sharing Center



3. Select "Connect to the internet" and press Next.



Figure 7: Choose a connection option

4. Select "No, create a new connection" and press Next.



Figure 8: Connect to the internet 1



#### 5. Select Dial-up.

	- • •
🚱 🥪 Connect to the Internet	
How do you want to connect?	
wireless Connect using a wireless router or a wireless network.	
Broadband (PPPoE) Connect using DSL or cable that requires a user name and password.	
Dial-up Connect using a dial-up modem or ISDN.	
Help me choose	
	Cancel

Figure 9: Connect to the internet 2

6. Select Telit Mobile Highspeed Modem

Connect to the Internet	
Which modem do you want to use?	
ThinkPad Modem	
Telit Mobile Highspeed Modem	
Help me decide	
	Cancel

Figure 10: Connect to the internet 3



 Enter the **Dial-up phone number \*99#** (the dial-up phone number might be different for other mobile phone providers) and press **Connect**.

🚱 🤬 Connect to the Internet				
Type the information f	Type the information from your Internet service provider (ISP)			
Dial-up phone number:	*99#	Dialing Rules		
<u>U</u> ser name:	[Name your ISP gave you]			
Password:	[Password your ISP gave you]			
	Show characters   Remember this password			
Connection <u>n</u> ame:	Dial-up Connection			
Allow other people to use this connection This option allows anyone with access to this computer to use this connection. I don't have an ISP				
		Connect Cancel		

Figure 11: Connect to the internet 4

8. To test the connection, select "Browse the internet now" (recommended), and close the Network and Sharing Center.



Figure 12: Connect to the internet 5

Please note: You can use all functions of the PTCarPhone during the dial-up session.



# 4 Disconnect and reconnect a dial-up connection

A working dial-up connection can be disconnected and reconnected using the connection symbols on the taskbar:





Figure 13: Connection symbol for a working internet connection

Figure 14:

Connection symbol for a disconnected internet connection

#### Click the connection symbol to open a context menu.

Currently connected to: Dial-up Connection Internet access		fy.
Dial-up and VPN		^
Dial-up Connection	Connected	
Open Network and Sh	aring Center	

Figure 15: Context menu for a working internet connection.

#### Click on **Dial-up Connection** to make the buttons **Disconnected** and **Connect** appear.



Figure 16: Display of a working Dial-up Connection with Disconnect button

Not connected	43 able
Dial-up and VPN	^
Dial-up Connection	2000 Connect
Open Network and Sha	aring Center

Figure 17: Display of a disconnected Dial-up Connection with Connect button



# **5 Addendum: Connection data**

Initialization command (general): **at+cgdcont=1,"IP","APN"** 

APN and Dial-up phone numbers are listed in this table:

Mobile Phone Provider	APN	Dial-up Phone Number
Telekom Deutschland	internet.telekom	*99#
Vodafone Deutschland	web.vodafone.de	*99#
E-Plus Deutschland	internet.eplus.de	*99#
o2 Germany	internet	*99#

Table 3: APN and Dial-up phone number

Please check the internet, if your mobile phone provider is missing in this table.

# END OF DOCUMENT